

# 330500 Velomitor Piezo-velocity Sensor

## Datasheet

Bently Nevada Machinery Condition Monitoring

---



## Description

Bently Nevada Velomitor Piezo-velocity Sensors are designed to measure absolute (relative to free space) bearing housing, casing, or structural vibration. The 330500 is a specialized piezoelectric accelerometer that incorporates embedded integrated electronics in a solid-state design.

Because the 330500 incorporates solid-state electronics and has no moving parts, it does not suffer from mechanical degradation and wear, and can be mounted vertically, horizontally, or at any other angle of orientation.

## Measuring Housings for Transducer Placement

If you are measuring a machine housing to determine where to place transducers, consider the types of measurements you want to obtain. Most common machine malfunctions like imbalance or misalignment originate at the rotor and cause a change—usually an increase—in rotor vibration.



If you integrate the 330500 Velomitor output to measure displacement, electrical noise from interference and the transducer circuit can be amplified. The noise can degrade performance of 330500 transducers and produce inaccurate displacement data.

To obtain high quality data, place the transducer in a location where it can best detect machine vibration through the bearing housing or machine casing. Choose a location, grounding, and shielding that maximizes amplitude and frequency response and lessens data that doesn't represent actual machine vibration.

Bently Nevada provides engineering services to determine the optimum location to install transducers. For assistance, contact Bently Nevada customer care or visit [Bently.com](http://Bently.com).



## 330500 Velomitor Piezo-velocity Sensor Datasheet

# Specifications

Parameters are specified from +20 °C to +30 °C (+68 °F to +86 °F) and at 100 Hz unless otherwise indicated.



Operating the transducer outside the specified limits may result in false readings or loss of machine monitoring.

## Electrical

Sensitivity	3.94mV/mm/s (100 mV/in/s) $\pm 5\%$ .
Frequency Response	4.5 Hz to 5 kHz (270 cpm to 300 kcpm) $\pm 3.0$ dB. 6.0 Hz to 2.5 kHz (360 cpm to 150 kcpm) $\pm 0.9$ dB.
Temperature Sensitivity	-14% to +7.5% typical over the operating temperature range.
Velocity Range	1270 mm/s (50 in/s) peak.
Transverse Sensitivity	Less than 5% of sensitivity.
Amplitude Linearity	$\pm 2\%$ to 152 mm/s (6 in/s) peak.
Mounted Resonant Frequency	Greater than 12 kHz.
Output Bias Voltage	-12 $\pm 3.0$ V <sub>DC</sub> , over temperature referenced to Pin A.
Dynamic Output Impedance	Less than 2400 $\Omega$
Broadband Noise Floor (4.5 Hz to 5 kHz)	0.004 mm/s (160 $\mu$ in/s) rms, nominal
Grounding	Case isolated
Maximum Cable Length	305 metres (1,000 feet) of cable, part number 02173006, with no degradation of signal.

## Environmental Limits

Operating Temperature Range	-55 °C to 1121 °C (-67 °F to 1250 °F).
-----------------------------	--

Shock Survivability	5,000 g peak, maximum
Relative Humidity	To 100% non-submerged; case is hermetically-sealed.
Base Strain Sensitivity	0.005 in/s/ $\mu$ strain.
Magnetic Field Susceptibility	<51 $\mu$ in/s/gauss (50 gauss, 50-60Hz).

## Physical

Weight	142 grams (5.0 oz), typical.
Diameter	25.3 mm (0.995 in).
Height	63.2 mm (2.49 in).
Case Material	316L stainless steel.
Connector	2-pin Mil-C-5015 hermetically-sealed, 316L stainless steel shell.
Mounting Torque	32-46 kg cm (24-40 in-lb) max.
Polarity	When the sensor case motion is toward the connector, Pin A becomes positive with respect to pin B.

## Compliance and Certifications

### FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

### EMC

EMC Directive 2014/30/EU

### RoHS

RoHS Directive 2011/65/EU

### Maritime

#### **330400 and 330425 only**

ABS 2009 Steel Vessels Rules

1-1-4/7.7,4-8-3/1.11.1,4-9-7/13

330500 Velomitor Piezo-velocity Sensor  
Datasheet

# Hazardous Area Approvals

## CSA/NRTL/C





### 190501 (Agency Approval Options 01 through 04)

Intrinsically Safe	<p>Ex ia IIC T4: Class I, Div 1, Groups A, B, C, D. Class II, Group E, F and G Class III</p> <p>AEx ia IIC T4: Class I, Div 1, Groups A, B, C, D; Class II, Groups E, F, G Class III</p> <p>Install per drawing 167536</p> <p>T4 @ -40 °C ≤ Ta ≤ +100 °C (-40 °F ≤ Ta ≤ +212 °F)</p>
Intrinsically Safe and Non-Incendive	<p>Ex nL IIC T4 Class I, Division 2, Groups A, B, C and D</p> <p>AEx nA T4 Class I, Division 2, Groups A, B, C and D</p> <p>Install per drawing 167536</p> <p>T4 @ -40 °C ≤ Ta ≤ +100 °C (-40 °F ≤ Ta ≤ +212 °F)</p>
<b>330400, 330425</b>	<p>Ex ia IIC T4 AEx ia IIC T4 Class I, Div 1 Groups A, B, C and D Class II, Groups E, F, and G Class III</p> <p>T4 @ -40°C ≤ Ta ≤ 100°C Install per dwg 167538</p>
<b>330500</b>	<p>Ex ia IIC T4 AEx ia IIC T4 Class I, Division 1, Groups A, B, C and D Class II, Groups E, F, G Class III</p> <p>Install per dwg 167537 T4 @ -40°C ≤ Ta ≤ 100°C</p>

	<p>Ex nL IIC T4 AEx nA IIC T4 Class I, Div 2, Groups A, B, C, D</p> <p>Install per dwg 167537 T4 @ -40°C ≤ Ta ≤ 100°C</p>
<b>330525</b>	<p>Ex ia IIC T4 AEx ia IIC T4 Class I, Division 1, Groups A, B, C and D Class II, Groups E, F, G Class III</p> <p>T4 @ -40°C ≤ Ta ≤ 100°C</p> <p>Ex nL IIC T4 AEx nA IIC T4 Class I, Div 2, Groups A, B, C, D</p> <p>Install per dwg 167539 T4 @ -40°C ≤ Ta ≤ 100°C</p>

## ATEX/IECEX

### 190501, 330400, 330425, 330500, 330525

<b>190501</b>	<p> II 1 G Ex ia IIC T4 Ga</p> <p> II 3 D Ex na IIC T4 Gc Ex tc III T130°C Dc</p> <p>T4@ Ta = -55°C to 121°C</p>												
<b>Entity Parameters</b>	<table> <tr> <th>Zone 0/1</th><th>Zone 2</th></tr> <tr> <td>Ui= 30V</td><td>Ui= 30V</td></tr> <tr> <td>Ii= 200mA</td><td>Ii= 200mA</td></tr> <tr> <td>Pi= 0.75W</td><td>Pi= 1.14W</td></tr> <tr> <td>Ci= 27.2nF</td><td></td></tr> <tr> <td>Li= 0</td><td></td></tr> </table>	Zone 0/1	Zone 2	Ui= 30V	Ui= 30V	Ii= 200mA	Ii= 200mA	Pi= 0.75W	Pi= 1.14W	Ci= 27.2nF		Li= 0	
Zone 0/1	Zone 2												
Ui= 30V	Ui= 30V												
Ii= 200mA	Ii= 200mA												
Pi= 0.75W	Pi= 1.14W												
Ci= 27.2nF													
Li= 0													
<b>330400, 330425, 330500, 330525</b>	<p> II 1 G Ex ia IIC T4 Ga</p> <p> II 3 D</p>												

## 330500 Velomitor Piezo-velocity Sensor Datasheet

<b>Entity Parameters</b>	Ex na IIC T4 Gc Ex tc III T130°C Dc	
	T4@ Ta = -55°C to 121°C	
	<b>Zone 0/1</b>	<b>Zone 2</b>
	Ui= 28V	Ui= 28V
	Ii= 150mA	Ii= 150mA
	Pi= 0.84W	Pi= 1.26W
	Ci-10.8nF	
	Li= 0	

## Hazardous Area Conditions of Safe Use

### ATEX/IECEX

#### Zone 0/1:

Equipment must be connected to equipment, which meets the abovelisted entity parameters.

The cables type A or B (in compliance with EN 60079-25) must respect the cable parameters listed with the entity parameters.

#### Zone 2 :

The supply electrical parameters shall not exceed the values mentioned in the tables above.

## 330500 Velomitor Piezo-velocity Sensor Datasheet

# Ordering Information



For the detailed listing of country and product specific approvals, refer to the **Approvals Quick Reference Guide**, Document 108M1756, at [Bently.com](http://Bently.com).

## Velomitor Piezo-velocity Sensor 330500-AA-BB

### A: Mounting Thread Adaptor Option

<b>00</b>	No adaptor
<b>01</b>	1/2 - 20 UNF
<b>02</b>	M8 x 1
<b>03</b>	1/4 - 28 UNF
<b>04</b>	1/4 - 20 UNC
<b>05</b>	Unavailable for 330500.

Note: For 1/4-18 NPT mounting, order 330525.

<b>06</b>	5/8 - 18 UNF
<b>07</b>	3/8 - 16 UNC
<b>08</b>	1/2 - 13 UNC

### B: Agency Approval Option

<b>00</b>	Not required
<b>01</b>	CSA/US/C
<b>02</b>	ATEX (European)
<b>04</b>	Multiple approvals (CSA, ATEX)

## Interconnection Cables


### Standard Cable Lengths

Feet	Meters (approximate)
6 ft	1.8 m
8 ft	2.4 m
10 ft	3.0 m
12 ft	3.6 m
15 ft	4.5 m
17 ft	5.0 m

Feet	Meters (approximate)
20 ft	6.0 m
25 ft	7.6 m
30 ft	9.0 m
33 ft	10.0 m
50 ft	15.2 m
99 ft	30.0 m

### Custom Cable Part Numbers

You can order custom cable lengths in increments of 1.0 ft (305 mm) at additional cost. Some cables have a minimum and maximum length.

Part Number	Description
 Use 'NN' in these part numbers to specify the length (in feet) of the cable you want to order.	
9571-NN	Two-conductor twisted, shielded 22 AWG cable with two-socket moisture-resistant female connector at one end, terminal lugs at the other end. Used with monitors. Not for use with 21128 Velocity Transducer Housing. Min. length: 2.0 ft (0.6 m) Max. length: 99 ft (30 m)
84661-NN	Two-conductor twisted, shielded 22 AWG armored cable with two-socket moisture-resistant female connector at one end, terminal lugs at the other end. Used with monitors. Not for use with 21128 Velocity Transducer Housing. Min. length: 3.0 ft (0.9 m) Max. length: 96 ft (29 m)
89477-NN	Two-conductor 18 AWG twisted, shielded cable with right angle two-socket plug at one end, terminal lugs at the other end. Used with monitors and with 21128 Velocity Transducer Housing. Min. length: 2.0 ft (0.6 m) Max. length: 99 ft (30 m)
125065-NN	Two-conductor 18 AWG twisted,

## 330500 Velomitor Piezo-velocity Sensor Datasheet

Part Number	Description
	shielded cable with two-socket plug and fluorosilicone elastomer boot at one end, terminal lugs at the other. Used with monitors. Not for use with 21128 Velocity Transducer Housing. Min. length: 2.0 ft (0.6 m) Max. length: 99 ft (30 m)

<b>02</b>	3/4 - 14 NPT
<b>03</b>	1/2 - 14 NPT
<b>04</b>	1/2 - 14 BSP
<b>B: Cable Exit Fitting Option</b>	
<b>01</b>	1/2 - 14 NPT plug
<b>02</b>	1/2 - 14 NPT explosion-proof
<b>03</b>	1/2 - 14 NPT explosion-proof with cable gland seal

## Velocity Transducer Housing Assembly

### 21128-AA-BB

#### A: Mounting Thread Option

<b>01</b>	Unthreaded
<b>02</b>	3/4 - 14 NPT
<b>03</b>	1/2 - 14 NPT
<b>04</b>	1/2 - 12 BSP

#### B: Cable Exit Fitting Option

<b>01</b>	1/2 - 14 NPT plug
<b>02</b>	1/2 - 14 NPT explosion-proof
<b>03</b>	1/2 - 14 NPT explosion-proof with cable gland seal



When using the 21128 Housing, cable part number 89477-AA is necessary to connect the Velomitor Sensor to a monitor.

## Velocity Transducer Housing – CENELEC approved

### 107770-AA-BB


This version is a combination of the 330500 Velomitor Sensor and a 21128 Housing pre-installed at the factory. It is also rated for CENELEC Zone 1, Group IIC hazardous area applications.

#### A: Mounting Thread Option

<b>01</b>	Unthreaded
-----------	------------


## 330500 Velomitor Piezo-velocity Sensor Datasheet

### Accessories

Part number	Description
100076	330500 Velomitor Sensor and Velomitor XA Sensor User Guide
02173006	Bulk cable; 2 conductor 18 AWG twisted, shielded cable without connectors or terminal lugs. Specify number of feet.
46000-01	Magnetic Base for temporary mounting of Velomitor Sensors. Used with 1/4 - 28 UNF mounting thread adapters.
46122-01	Quick Connect for semi-permanent mounting of Velomitor Sensors. Used with 1/2 - 20 UNF mounting thread adapters.
89409-01	Individual 1/2 - 20 UNF mounting adapter.
89410-01	Individual M8 x 1 mounting adapter.
89411-01	Individual 1/4 - 28 UNF mounting adapter.
89412-01	Individual 1/4 - 20 UNC mounting adapter.
89413-01	Individual 1/4 - 18 NPT mounting adapter. Spares only. For new installations, order 330525 velometer.
04300015	Individual 5/8 - 18 UNF mounting adapter.
161191	Individual 1/2 - 13 UNC mounting adapter.  The Velomitor Sensor is shipped with an adapter. Individual adapters are available as spares.
101212-01	Velomitor Sensor connector kit. Used with housings and retrofits.
123135-01	Velomitor Sensor Power Module.



## Graphs and Figures

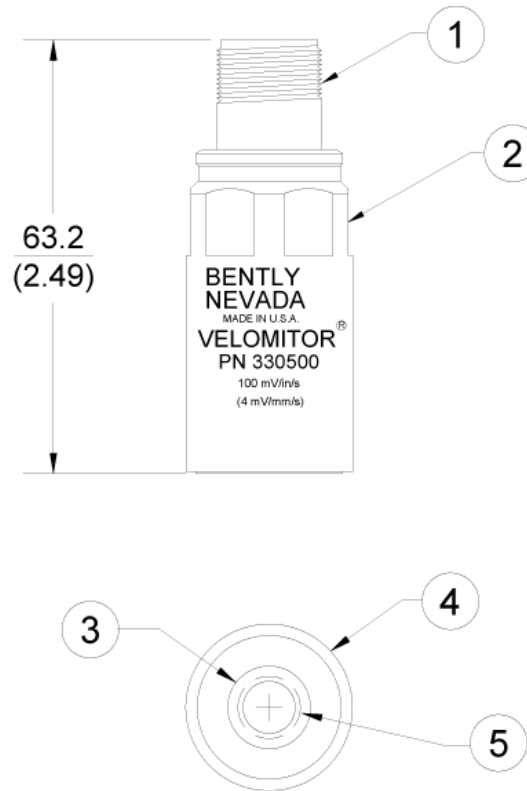

1. 2-pin, MIL-C-5015 receptacle
2. 15/16 inch hexagonal
3. 12.7 (0.500) diameter, 0.8 (0.030) deep counterbore
4. 25.3 (0.995) diameter
5. 3/8-24 UNF-2B, 6.4 (0.250) minimum threaded depth, 14.0 (0.550) maximum drill depth

**Figure 1: Velomitor Piezo-Velocity Sensor Dimensional Drawing**

330500 Velomitor Piezo-velocity Sensor  
Datasheet

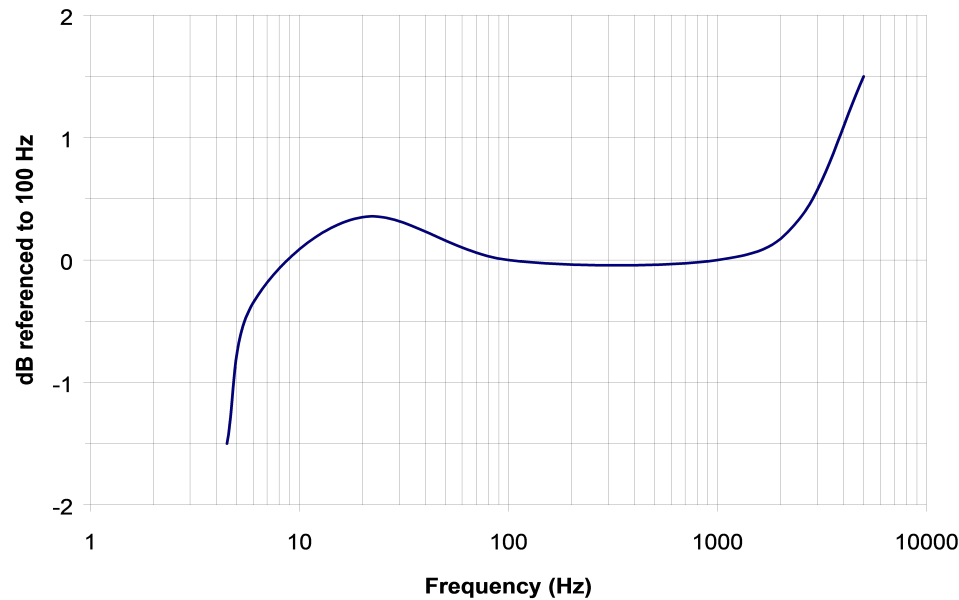


Figure 2: Typical Amplitude Response

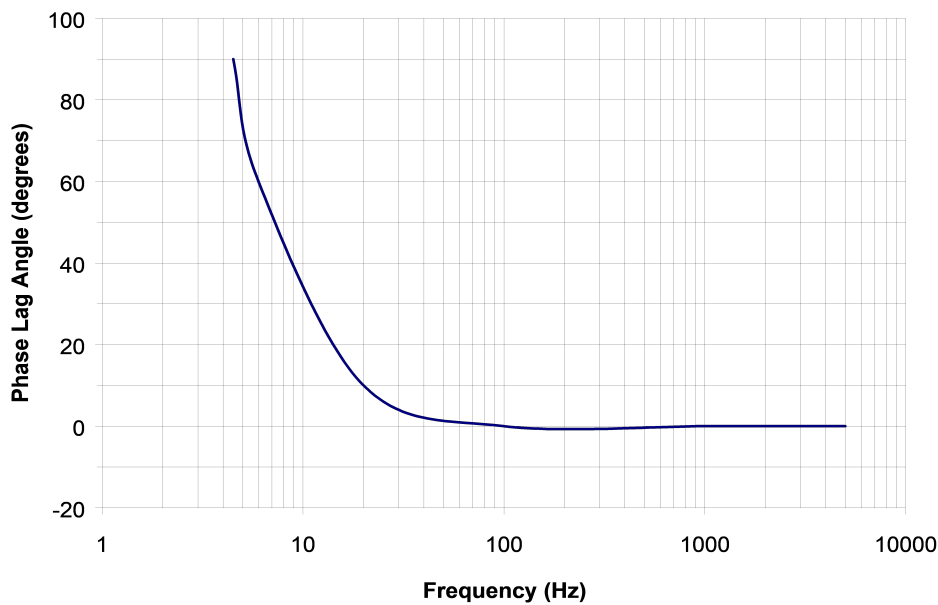


Figure 3: Typical Phase Response

330500 Velomitor Piezo-velocity Sensor  
Datasheet

---

Copyright 2019 Baker Hughes, a GE company, LLC ("BHGE") All rights reserved.

Bently Nevada, Orbit Logo and Velomitor are registered trademarks of BHGE in the United States and other countries. All product and company names are trademarks of their respective holders. Use of the trademarks does not imply any affiliation with or endorsement by the respective holders.

This product may be covered by one or more patents, see [Bently.com/legal](https://www.bently.com/legal) for current status.

The information contained in this document is subject to change without prior notice.

1631 Bently Parkway South, Minden, Nevada USA 89423

Phone: 1.775.782.3611 [Bently.com](https://www.bently.com)

**BAKER  
HUGHES**  
a GE company

